



Touring 150 DE Diagram 3 ---- Engine & Drivetrain

## Touring 150 DE Diagram 3 ---- Engine & Drivetrain

# on This Diagram	Name/Description	Category	Phone Reference #
1	SELF-LOCK NUT M8	<a href="#">BODY &amp; HARDWARE</a>	150T-H-3-1
2	WASHER M8	<a href="#">BODY &amp; HARDWARE</a>	150T-H-3-2
3	RUBBER BRACKET	<a href="#">Frame, Steering &amp; Suspension</a>	150T-H-3-3
4	RUBBER BUSHING	<a href="#">Frame, Steering &amp; Suspension</a>	150T-H-3-4
5	NUT M10	<a href="#">BODY &amp; HARDWARE</a>	150T-H-3-5
6	ENGINE MOUNT BOLT	<a href="#">Frame, Steering &amp; Suspension</a>	150T-H-3-6
7	BOLT M10*55	<a href="#">BODY &amp; HARDWARE</a>	150T-H-3-7
8	ENGINE MOUNT SWING BRACKET	<a href="#">Frame, Steering &amp; Suspension</a>	150T-H-3-8
9	DIPSTICK	<a href="#">ENGINE/DRIVETRAIN</a>	150T-H-3-9
10	NUT M16	<a href="#">BODY &amp; HARDWARE</a>	150T-H-3-10
11	OIL SEAL	<a href="#">Frame, Steering &amp; Suspension</a>	150T-H-3-11
12	CIRCLIP	<a href="#">Frame, Steering &amp; Suspension</a>	150T-H-3-12
13	SWING ARM BEARING	<a href="#">Frame, Steering &amp; Suspension</a>	150T-H-3-13
14	REAR SWING ARM	<a href="#">Frame, Steering &amp; Suspension</a>	150T-H-3-14
15	BUSHING	<a href="#">Frame, Steering &amp; Suspension</a>	150T-H-3-15
16	REAR BRAKE DISC	<a href="#">Brakes, Tires &amp; Wheels</a>	150T-H-3-16
17	REAR BRAKE DISC BOLT	<a href="#">Brakes, Tires &amp; Wheels</a>	150T-H-3-17
18	REAR WHEEL RIM	<a href="#">Brakes, Tires &amp; Wheels</a>	150T-H-3-18
19	REAR TIRE 4.00-12	<a href="#">Brakes, Tires &amp; Wheels</a>	150T-H-3-19
20	EMISSIONS TUBING	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-20
21	EMISSIONS TUBING CLAMP	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-21
22	CHARCOAL CANISTER	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-22
23	EMISSIONS TUBING	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-23
24	EMISSIONS SWITCH	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-24
25	BOLT M6*35	<a href="#">BODY &amp; HARDWARE</a>	150T-H-3-25
26	ONE WAY VALVE COVER	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-26
27	BOLT M6*16	<a href="#">BODY &amp; HARDWARE</a>	150T-H-3-27
28	ONE WAY VALVE COMP	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-28
29	EMISSIONS TUBING	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-29

	<b>Name/Description</b>	<b>Category</b>	<b>Phone Reference #</b>
30	EMISSIONS TUBING CLAMP	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-30
31	EMISSIONS TUBING SMALL	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-31
32	EMISSIONS TUBING METAL	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-32
33	SPARK PLUG	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-33
34	ENGINE SHROUD	<a href="#">ENGINE/DRIVETRAIN</a>	150T-H-3-34
35	SMALL TUBING CLAMP	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-35
36	VALVE COVER BREATHER TUBE	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-36
37	CVT VENT FILTER	<a href="#">ENGINE/DRIVETRAIN</a>	150T-H-3-37
38	CVT VENT FILTER CLAMP	<a href="#">ENGINE/DRIVETRAIN</a>	150T-H-3-38
39	KICK START FOOT LEVER	<a href="#">ENGINE/DRIVETRAIN</a>	150T-H-3-39
40	BOLT M6*25	<a href="#">BODY &amp; HARDWARE</a>	150T-H-3-40
41	STARTER MOTOR	<a href="#">ENGINE/DRIVETRAIN</a>	150T-H-3-41
42	INTAKE SPACER GASKET	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-42
43	INTAKE MANIFOLD	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-43
44	NUT M6	<a href="#">BODY &amp; HARDWARE</a>	150T-H-3-44
45	INTAKE MANIFOLD TO CARB CLAMP	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-45
46	CARBURATOR ASSEMBLY	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-46
47	CARB TO AIR INTAKE CLAMP	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-47
48	VACUUM HOSE	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-48
49	SMALL TUBING CLAMP	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-49
50	VACUUM HOSE T	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-50
51	VACUUM HOSE	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-51
52	SMALL HOSE CLAMP	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-52
53	HOSE GUARD SPRING	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-53
54	FUEL LINE TUBING	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-54
55	EXTERNAL FLOAT BOWL DRAIN	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-55
56	BOLT M6*30	<a href="#">BODY &amp; HARDWARE</a>	150T-H-3-56
57	FUEL LINE TUBING	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-57
58	SMALL TUBING CLAMP	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-58
59	VACUUM FUEL PUMP	<a href="#">Fuel, Air &amp; Exhaust</a>	150T-H-3-59
60	HEX FLANGE BOLT M6	<a href="#">BODY &amp; HARDWARE</a>	150T-H-3-60
61	HEX FLANGE BOLT M6*12	<a href="#">BODY &amp; HARDWARE</a>	150T-H-3-61

	<b>Name/Description</b>	<b>Category</b>	<b>Phone Reference #</b>
62	FUEL FILTER	<a href="#"><u>Fuel, Air &amp; Exhaust</u></a>	150T-H-3-62
63	FUEL LINE TUBI NG	<a href="#"><u>Fuel, Air &amp; Exhaust</u></a>	150T-H-3-63
64	VACUUM HOSE	<a href="#"><u>Fuel, Air &amp; Exhaust</u></a>	150T-H-3-64
65	AIR CLEANER	<a href="#"><u>Fuel, Air &amp; Exhaust</u></a>	150T-H-3-65
66	AIR CLEANER WASTE TUBE	<a href="#"><u>Fuel, Air &amp; Exhaust</u></a>	150T-H-3-66
67	AIR FIITER CORE	<a href="#"><u>Fuel, Air &amp; Exhaust</u></a>	150T-H-3-67
68	SCREW,AIR FILTER CORE	<a href="#"><u>Fuel, Air &amp; Exhaust</u></a>	150T-H-3-68
69	COVER,AIR FLITER	<a href="#"><u>Fuel, Air &amp; Exhaust</u></a>	150T-H-3-69
70	TAP SCREW ST4.8*16	<a href="#"><u>BODY &amp; HARDWARE</u></a>	150T-H-3-70
71	BASE GASKET	<a href="#"><u>ENGINE/DRIVETRAIN</u></a>	150T-H-3-71
72	COMPLETE ENGINE	<a href="#"><u>ENGINE/DRIVETRAIN</u></a>	150T-H-3-72
73	CVT BELT 842/20/30	<a href="#"><u>ENGINE/DRIVETRAIN</u></a>	150T-H-3-73
74	WHEEL,DRIVE ASSY	<a href="#"><u>ENGINE/DRIVETRAIN</u></a>	150T-H-3-74
75	WHEEL,DRIVEN ASSY	<a href="#"><u>ENGINE/DRIVETRAIN</u></a>	150T-H-3-75
78	HEAD GASKET	<a href="#"><u>ENGINE/DRIVETRAIN</u></a>	150T-H-3-78
83	RINGS	<a href="#"><u>ENGINE/DRIVETRAIN</u></a>	150T-H-3-83
84	PISTON	<a href="#"><u>ENGINE/DRIVETRAIN</u></a>	150T-H-3-84
85	CYLINDER BLOCK	<a href="#"><u>ENGINE/DRIVETRAIN</u></a>	150T-H-3-85