

Catalogue

1. Notice items for safely driving	1	Inspection for steering bar	22
Way of driving	2	Inspection braking	23
Loading	3	Inspection for braking light	24
2. All parts name	4	Inspection for turn signal	25
3. All parts operation	6	Inspection for wheel	26
Speedometer assy	6	Inspection for front & rear damper	26
Indicator light	7	Inspection for head light, tail light, sidelight	27
Main switch	8	Angle of speedometer, horn, rear mirror	27
Starting button switch comp head light	8	Rear number plate, exhaust muffler	28
Changing switch comp head light horn button	8	Inspection for air cleaner	29
Switch comp turn signal	9	Exchanging for oil	29
Key comp helmet and case	10	Exchanging for gear oil	30
Lock comp steering bar	11	Inspection for spark plug	31
Front luggage	12	6. Simply maintaining and adjusting	31
Engine starting	13	Stable for period maintaining items and time	32
Electric starting	14	Clear the battery head	33
Kick starting	14	Replace the fuse	34
4. Normal driving ways	15	Way of cleaning for air cleaner	35
Correctly drive	17	Adjusting carburetor and choke	36
Sparking way	20	7. Specification	37
5. Check before driving	21	8. Electric principal drawings	38
Inspection and adding for gasoline	22		

 
■ Way of driving

- Should only keep the natural guise to operate it with actively.




- Performance of safely operation is made effect to position of seat, so please seat the center, if not will happen to accident.

- The body should lean in the road when swerving, if not, will lose controlling.

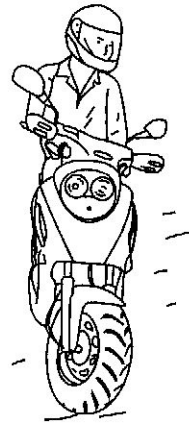

- Pay attention to driving the broken road or crush road. Firstly acknowledge the conditions on the accidented road, should reduce the speed, and relax the hand, shoulder and catch hold of bar of throttle.

 2.Part Name

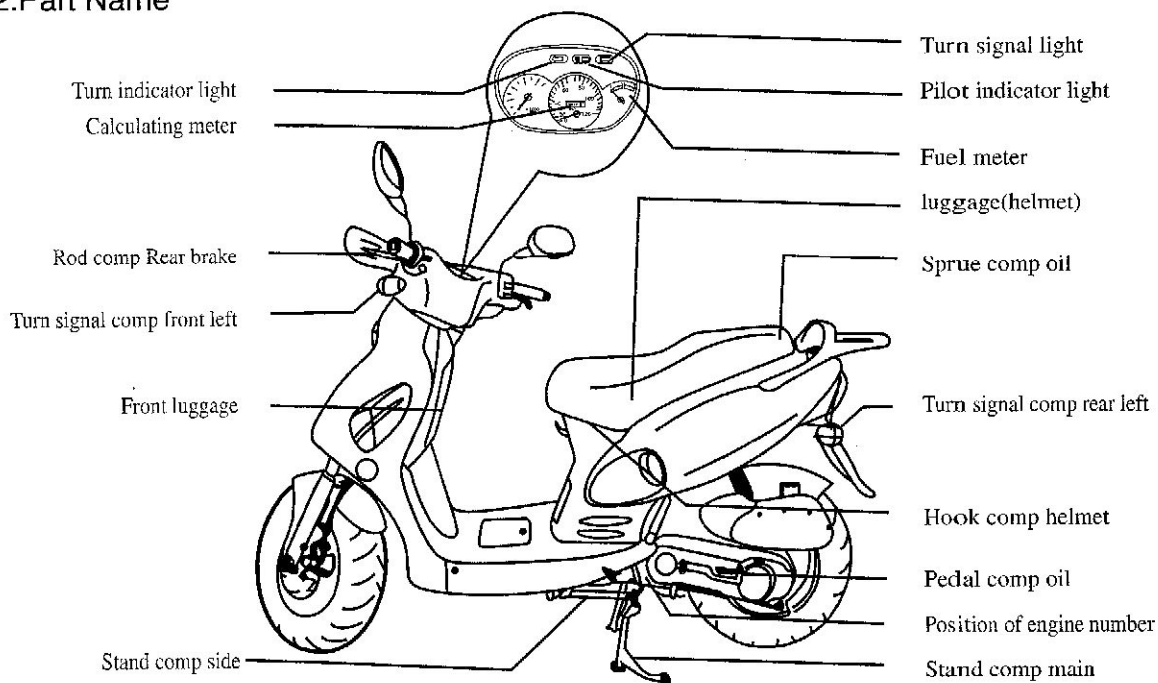

3. ALL PARTS OPERATION

■ SPEEDOMETER ASSY INDICATOR LIGHT

① Clock

The standard of running speed is by KM/H

② Mileage meter

 
The total mileages show in KM, white bottom and black word standard 100m

③ Pilot indicator light

The light show pilot.

④ Turn signal

When operating the handle light, the indicator light is switched on.

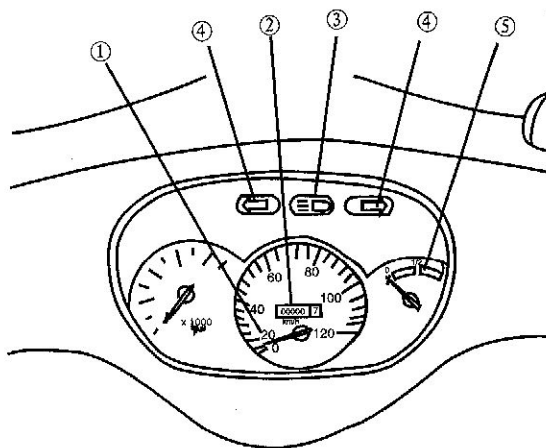


⑤ Fuel meter

It shows the capacity of oil in fuel tank, (The fuel reading is right when the main switch lie the "○", and the fuel reading doesn't show, when the main switch lie to "⊗"). Please add up the 90# gasoline in time when the fuel hand shows the read area.

■ STARTING BUTTON

 When using the electric button, must draw the rod of front braking or step urgently rear braking pedal until touch with the electric resource and start it.

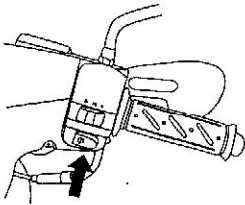

■ SWITCH COMP HEAD LIGHT



 
The headlight, sidelight and speedometer light are shut off at the same time.



The sidelight and speedometer light are switched on. (But the engine don't start and the light is shut off)




The headlight and speedometer light are switched on at the same time.

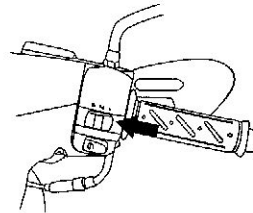


■ HEAD LIGHT CHANGE SWITCH OVERTAKING SIGNAL SWITCH

The headlight light the changing switch of pilot and near light.

 
- ☰ When pilot working, use the position.
- ☷ Use it if the front vehicle appears or drive in the city.



 When overtaking if front vehicle appears, constantly place the PASSING position for headlight, the headlight can flash and warn the front vehicle.

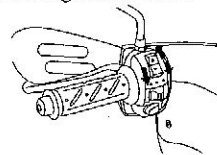

■ KEY OF HELMET

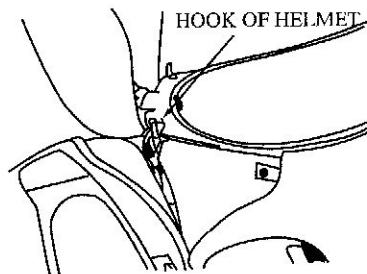 

Way of using

- (1) Open lock comp seat and wrench it.
- (2) Make the mineral ring of helmet into the hook.
- (3) Put down the seat until lock it automatic.

 
Way of taking down

- Reference above ways.

NOTICE

- Must not hook the helmet in the vehicle to damage the plastic.

■ CASE OF HELMET

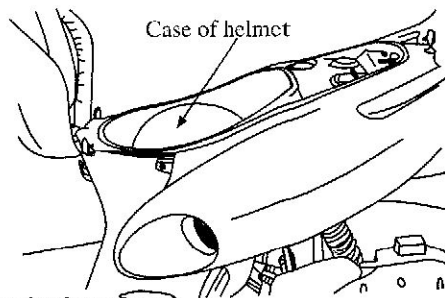

It lies under the seat

Way of taking away is reference the above(1)

When replace the helmet, should make the jaw of helmet bottom.

NOTICE

- The max of loading doesn't excess 10kg.
- Confirm whether the seat can be locked.
- Forbid to place the lower-heat resistant goods, food and combustible into the luggage because of high temperature of engine.
- Forbid to place expensive goods into it.
- Pay attention to cleaning to avoid making the water into it.

■ FRONT LUGGAGE

Way of opening

Insert the key and turn right till open.

 
Way of closing

Insert the key and turn right, and close front luggage cover, with taking out the key after turning left.


NOTICE

- The loading of front luggage doesn't exceed 1.5kg.
- Forbid to place the expensive into the case.
- Pay attention to clear to avoid making the water into case.

WAY FOR OPENING

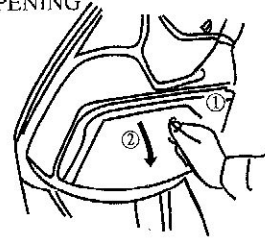


WAY FOR CLOSING

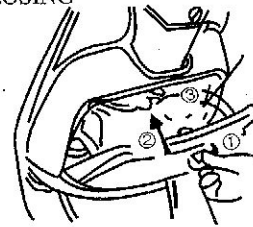 

USING THE KEY WHEN CLOSING FRONT LUGGAGE

 
(ELECTRIC STARTING)

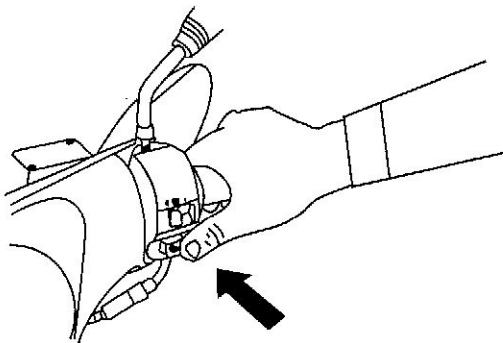

NOTICE

The hand leaves the button after starting engine, and don't touch with the button in running, rear braking light can light when catch hold of front braking bar or rear braking step. The time of catching doesn't exceed 3 minutes, and every other spare doesn't exceed 10 seconds.
 
<Kick start>

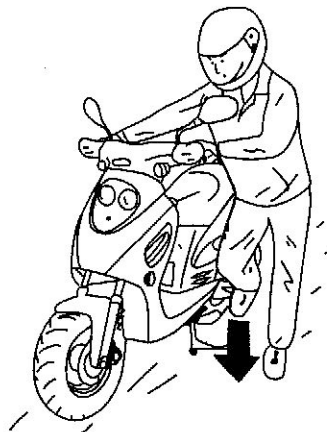


NOTICE

Return the starting rod to previous place after starting engine, if not, will effect on safely drive.

② UNCHAINING FOR REAR BRAKING

 
Loose rod of rear braking

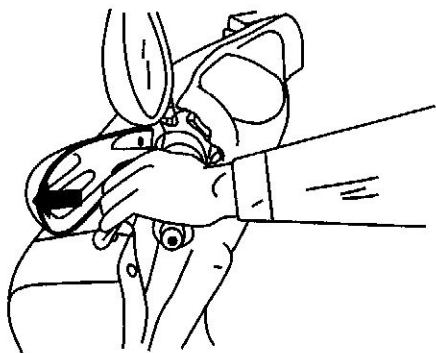

NOTICE

- Forbid to add up oil to the throttle bar after loose the pedal of rear braking pedal, avoid to rush and happen dangerous.

 ③ Turn the throttle bar slowly and the vehicle moves slowly.

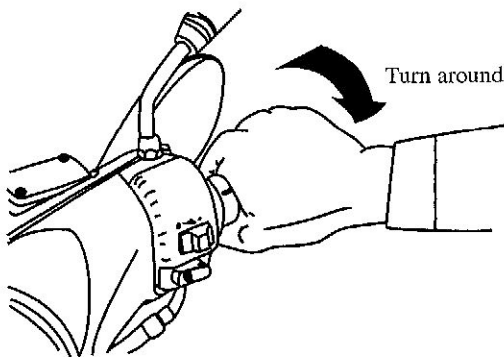

NOTICE


- Forbid to turn the throttle urgently in order to avoid to rush immediately.

■ THE CORRECTLY DRIVING IN THE PERIOD OF NEW MESH WILL EFFECT ON ENGINE USAGE.

- Please keep the speed 60 km in the new period of 1500km, details are as follows:


MILEAGE KM	0 ~ 300	300 ~ 500	500 ~ 1000	1000 ~ 1500
Speed	25 ~ 30	35 ~ 40	45 ~ 50	55 ~ 60

 - Avoid urgent speed up.
- Should replace oil of crankcase and gear oil after meshing.

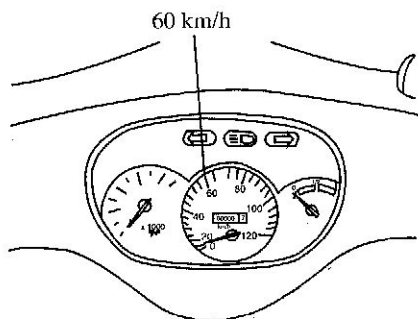

■ USING THE FRONT AND REAR BRAKING AT THE SAME TIME WHEN BRAKING

 - Braking it after turn the throttle previous place.
- Should slow brake it firstly and draw it.

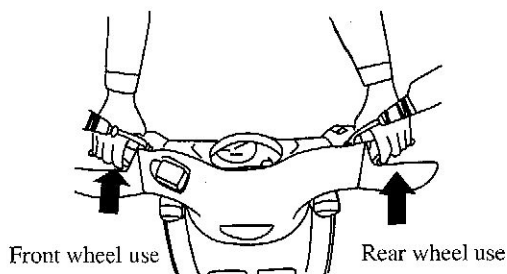

NOTICE

 
- Make the vehicle unsteady and slick by using one braking, so pay attention to it.

■ WAY OF SPARKING

① When approach the sparking place


- Open turn signal and notice rear, and slowly stop the vehicle.
- Return the throttle to previous place and brake front and rear braking, at the same time rear brake light is switched on and warn rear vehicle appears.

NOTICE: As the vehicle lean too much will make the idle speed instability.

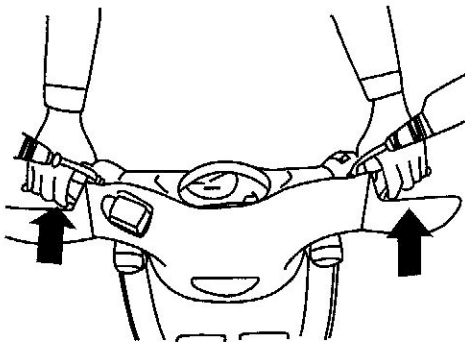


② WHEN THE VEHICLE STOPS FULL

 - Return the turn signal switch to previous place, and wrench the main switch to "X".

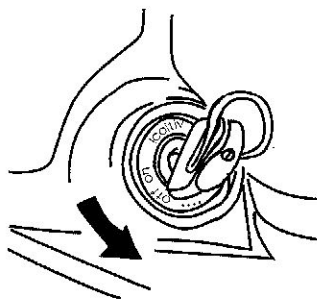

NOTICE

 - When driving, if shut off main switch and take out the key, the electric system will not work, this is one clause, so operate it when sparking.

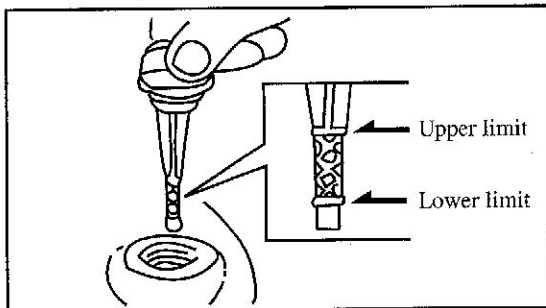

■ APPOINT ESPECIALLY OIL

 
Four stroke, especially oil:SAE10W-30

NOTICE

1. There have a lot of dummy oil and make a mistake for using to happen trouble.
2. In order to assure your vehicle safety, please safely drive it per as stated and requirement.

① CHECKING AND ADDING UP FOR OIL

- Should add up oil when fuel meter hand shows red area.
- Please add up #90 oil in time.
- Capacity of fuel tank : 5L

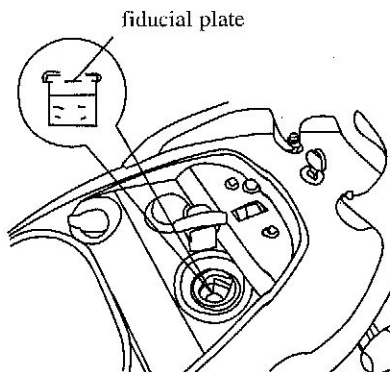

NOTICE: Please burn out when open fuel tank cover and forbid smoke.

 
③ CHECKING BRAKING

<CLEARANCE OF BRAKING ROD>

The braking rod must have proper clearance. It has a proper clearance between checking braking rod to relaxing rod.

The proper clearance which the rod of braking has, will confirm whether operation of rod work as normal.

Check whether rod of braking clearance is the range between 1-2cm.

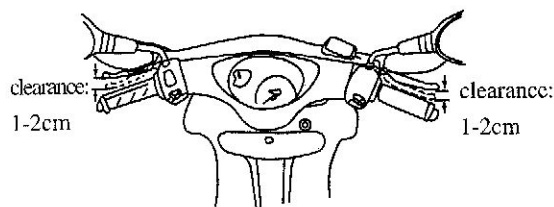


<checking for front braking liquid>

1. Make the handle bar well and check the capacity of oil in right fuel tank, which keep at the lever between the limit of upper and under.


2. Should check abrasion of braking rubber when the lever of liquid approach the limit of under.


3. If the rubber of braking is born and not exceed limit stated, which shows condition of leakage oil; please you contact with dealer.

 4. Recommend oil: DOT3

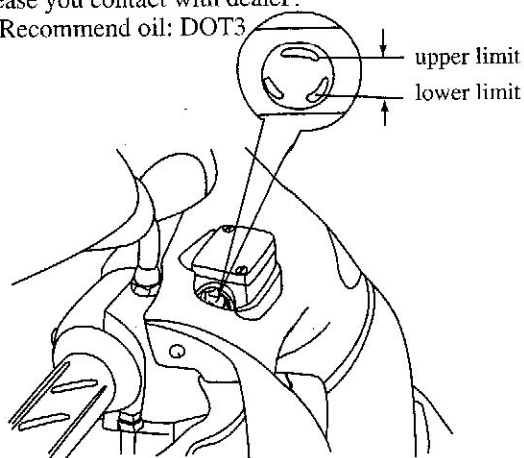

5 Checking for turn signal

  - Turn main switch to "  ".
- Switch of turn signal can confirm whether all turn signal are switched on.

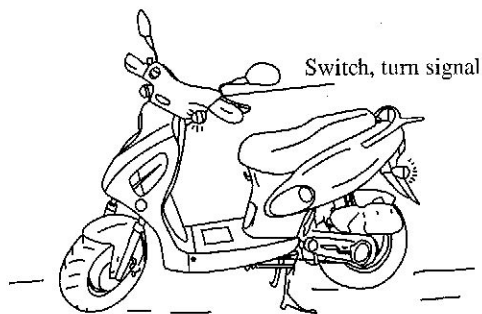


6 Checking for wheel

- Is the air pressure of wheel usually?

Natural pressure

Front wheel 196Kpa

 Rear wheel 221Kpa

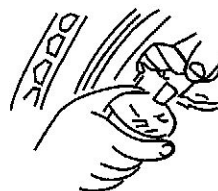

(air pressure of wheel)

9] THE FUNCTION OF SPEEDOMETER HAND

10] DOES THE HORN NOISE?

Put down " Q " and the horn will noise.

11] Is the angle of rear mirror proper?

Seat on the vehicle and confirm and check whether it has broken and dusty.

12] Is the rear number plate dusty?

Check the number plate is broken and dusty.

13] Is different to exhaust?

Check the exhaust of pipe has broken and loosen.

14] All others

- Should please you maintain the vehicle usually in order to assure to safely drive.
- When don't use it long before, please too maintain usually it.
- The first checking
Should please you check and maintain it the period of new using month or driving in 300km.

 
■ REPLACE GEAR OIL

<The period of replace>

Replace gear oil in the period of 300km, every half a year or 300km later with 10# or GY gear oil.

The capacity of gear oil

- All capacity:0.11L

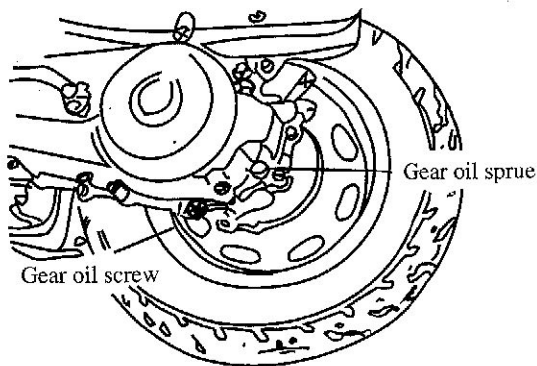

<Ways of changing>

1. Support the vehicle on the smooth ground.
2. Take out letting and pouring screws.
3. Don't run the warm engine, if not, the remain oil will out or fuel tank.
4. Clear out and lock the letting screw.
5. Make the oil into the fuel tank till the under lever of o-hole.
6. Lock the screw.

NOTICE

- Replace gear oil usually, as follows:
- Drive in the wet day.
- Drive too long.
- Overtake to drive.

MAINTAINING ITEMS AND STABLE

Should check and maintain it in order to assure to safely drive, keep performance, extend usage and reduce pollution.

1. checking, if possible clearing, lubrication, adjusting or replacing A adjusting, R: replacing T lock.


Items	MILEAGE (km)														Check before driving
	300	1000	2000	3000	4000	5000	6000	7000	8000	9000	10000	11000	12000		
Engine oil	R	R	R	R	R	R	R	R	R	R	R	R	R	R	I
Oil web	C				C				C					C	
Gear oil	R			R			R			R				R	
Spark plug	Clean every 2000 km, change if need.														
Valve clearance in 0.12 out 0.12		A			A				A					A	
Chain		A			A				A					A	
Carburetor					I				I					I	
Air cleaner	Cleanout filter core every 2000 km, change every 5000km.														
Battery electrolyte		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Fuel web	Cleanout every 1000km, change if need.														
Oil pump	I				I				I					I	
Braking system		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Drive belt									I						
All parts screws	T					T					T				
Waste air depth		Check frequently, adjust, Avoid polluting air													
* the above items will change because of different from the kind of vehicle.															
* The mileages are exceed the above stable, please active per as.															
* When drive in the dusty area, please clear out the score usually.															

■ REPLACE FUSE


Shut off main switch and check whether the fuse is broken.

Replace the fuse as per stated.

 
- * Please check the clause of broken and replace it.
- * Open cover and the fuse in the fuse case.
- * Draw up the o-clip.



Wire harness

 

Fues clip

 

Insert
Fix on

- Replaces the electric goods, please use the appointed
- station specification parts.
- Forbid to use the not-specification goods.
- Avoid rush it with water, when clear out .

NOTICE

 
- When taking down, don't extend the ring clip too large.
- When assembling, confirm whether clip of guide ring loose, if has, please maintain it.
- Doesn't use the fuse which is not specification, if not will happen damage.

■ ADJUSTING FOR CHOKE AND CARBURETOR

Steady steam function is the basis of good performance of engine, so don't freely change it, you only adjust it as follows: adjust choke and idle speed.

(a) adjust choke

1. Check whether work of choke is orderly.
2. Check the clearance of choke is 2-6 mm, if adjust it, you only adjust nut(1) and adjuster(2) Torque adjustment.

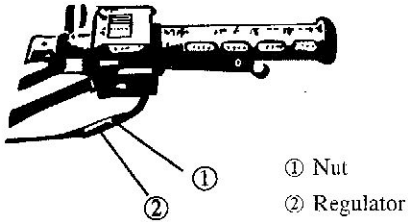

b) adjust idle speed

1. should warm up the engine.
2. adjust it till the need of requirment.

8. Electric circuit drawing

