



Item	P/N	Description
1	<u>RS125-B01.01</u>	Mirror Set (Left & Right)
2	<u>RS125-B01.02</u>	Left Grip
3	RS125-B01.03	Left Switch Assy
4	<u>RS125-B01.04</u>	Rear Handlebar Cover
5	<u>RS125-B01.05</u>	Right Switch Assy
6	RS125-B01.06	Handlebar
7	RS125-B01.07	Rear Brake Cable
8	RS125-B01.08	Throttle Cable
11	<u>RS125-B01.11</u>	Right Grip

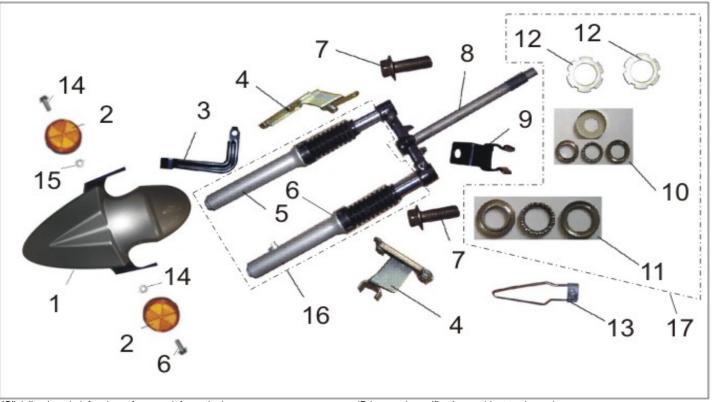

Item	P/N	Description
1	RS125-B02.01BLU	Front Fender - Blue
1	RS125-B02.01SLV	Front Fender - Silver
2	TNG-B11.02	Reflector, 2-3/8" Dia, Amber, DOT
3	RS125-B02.03	Bracket
4	<u>RS125-B02.04</u>	Front Fender Bracket
8	RS125-B02.08	Steering Column
9	RS125-B02.09	Bracket

10	RS125-B02.10	Upper Bearing Set
11	RS125-B02.11	Lower Bearing Set
12	RS125-B02.12	Locknut
13	RS125-B02.13	Guide Clip
16	RS125-B02.16	Front Shock Absorber Set
17	<u>RS125-B02.17</u>	Upper and Lower Bearing Set

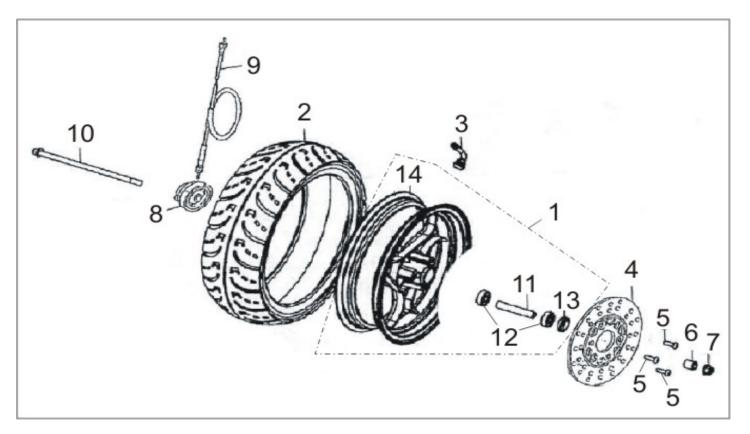



(Prices and specifications subject to change)

Item P/N


Description


RS125-B03.02	Front/Rear Tire 120/70-12
RS125-B03.04	Front Brake Rotor
RS125-B03.05	Brake Disc Bolt
RS125-B03.06	Collar, Front Axle
RS125-B03.08	Speedometer Pickup
RS125-B03.09	Speedometer Cable
RS125-B03.10	Front Axle
RS125-B03.11	Spacer
RS125-B03.12	Ball Bearing
RS125-B03.13	Seal
<u>RS125-B03.14</u>	Front Wheel Rim
	RS125-B03.04RS125-B03.05RS125-B03.06RS125-B03.08RS125-B03.09RS125-B03.10RS125-B03.11RS125-B03.12RS125-B03.13

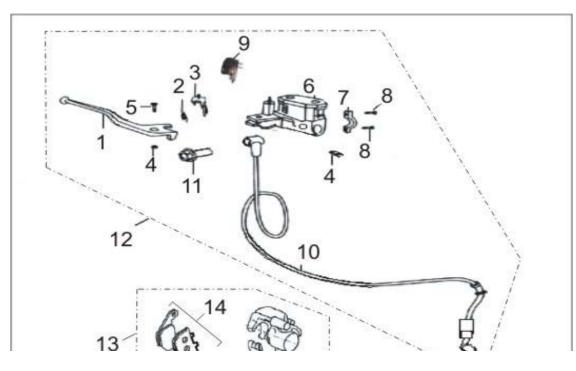

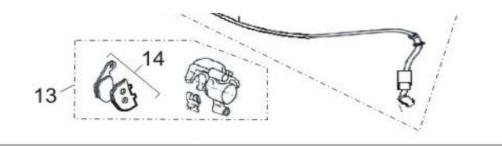


Item	P/N	Description
1	<u>RS125-B04.01</u>	Right Brake Lever
2	<u>RS125-B04.02</u>	Return Spring
3	<u>RS125-B04.03</u>	Connecting Socket
6	<u>RS125-B04.06</u>	Master Cylinder
9	<u>RS125-B04.09</u>	Switch, Front Brake
11	<u>RS125-B04.11</u>	Bolt, Oil Inlet
12	<u>RS125-B04.12</u>	Disk Brake Front
13	<u>RS125-B04.13</u>	Front Caliper Assy
14	RS125-B04.14	Front Brake Pad Set

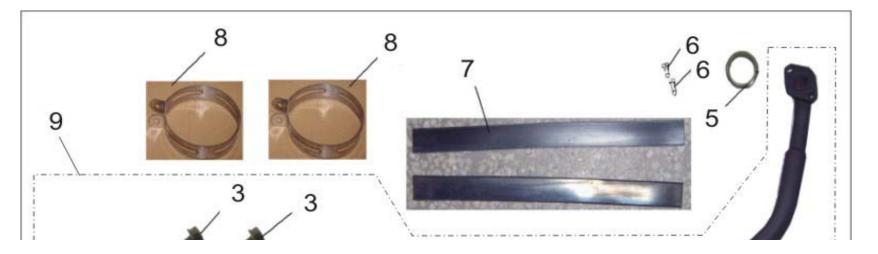


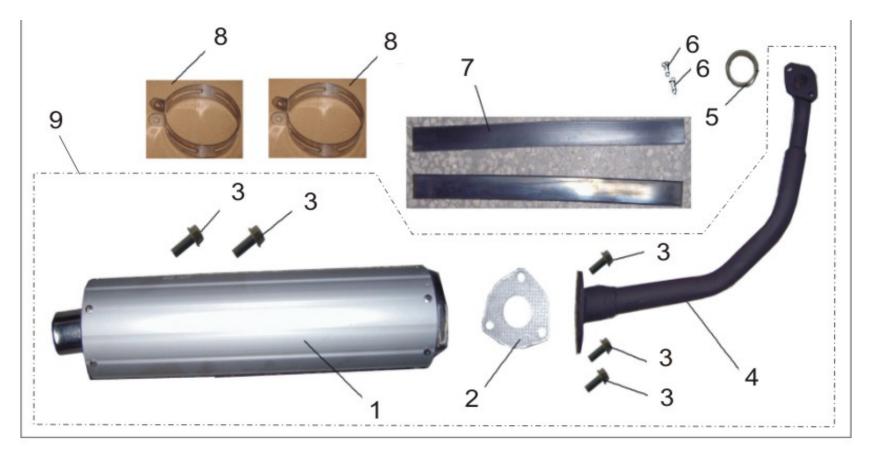


ltem	P/N	Description
5	<u>125T-E03.22</u>	Exhaust Pipe Sealing Ring
7	LS49-B25.12	Clamp Cushion
8	LS49-B25.11	Muffler Clamp
9	<u>RS125-B05.09</u>	Muffler Assy

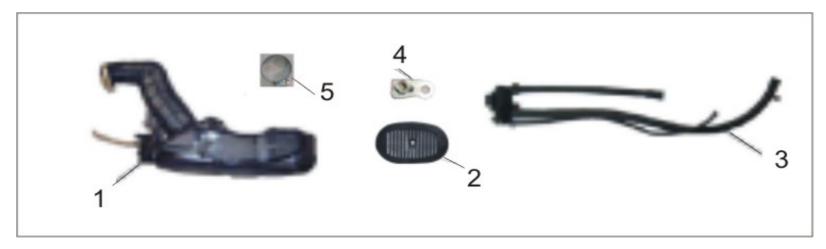

Item	P/N	Description
1	<u>RS125-B06.01</u>	Air Cleaner Assy
2	<u>RS125-B06.02</u>	Header Pipe
3	<u>RS125-B06.03</u>	Secondary Air System
4	<u>RS125-B06.04</u>	Air Filter Frame

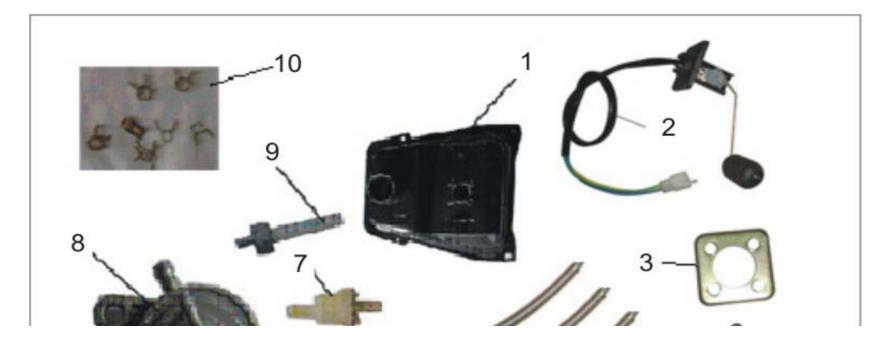

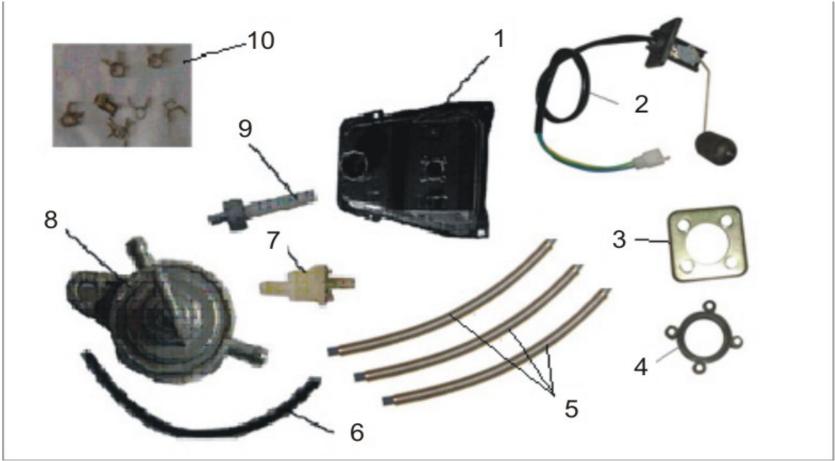

Item	P/N	Description
1	<u>RS125-B07.01</u>	Fuel tank
2	<u>RS125-B07.02</u>	Fuel Sending Unit
7	<u>VN49-B07.17</u>	Fuel Filter
8	<u>VN49-B07.04</u>	Petcock
9	<u>RS125-B07.09</u>	Tank Filter






	6 5 1	
Item 1	Р/N <u>RS125-B08.01</u>	Description Carburetor Access Cover
2	<u>RS125-B08.02</u>	Seat Storage Compartment
3	<u>RS125-B08.03</u>	Seat Box Front Cover
4	<u>RS125-B08.04</u>	Spark Plug Access Cover
5	<u>RS125-B08.05</u>	Seat

⁶ RS125-B08.06


Seat Lock Bracket

7 <u>RS125-B08.07</u>

Seat Lock Cable

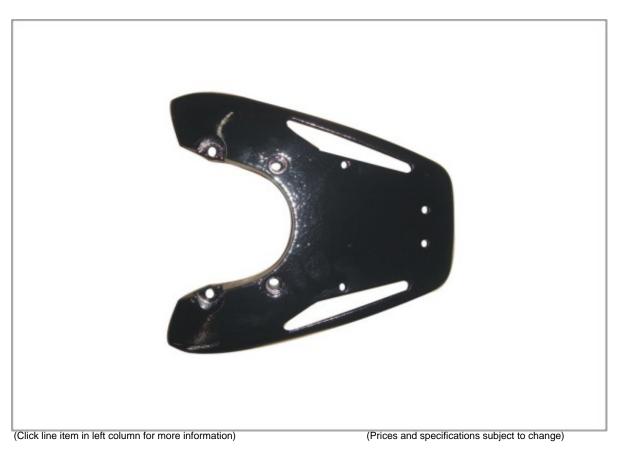

Item	P/N	Description
1	<u>RS125-B09.01BLU</u>	Rear Rack - Blue
1	RS125-B09.01SLV	Rear Rack - Silver

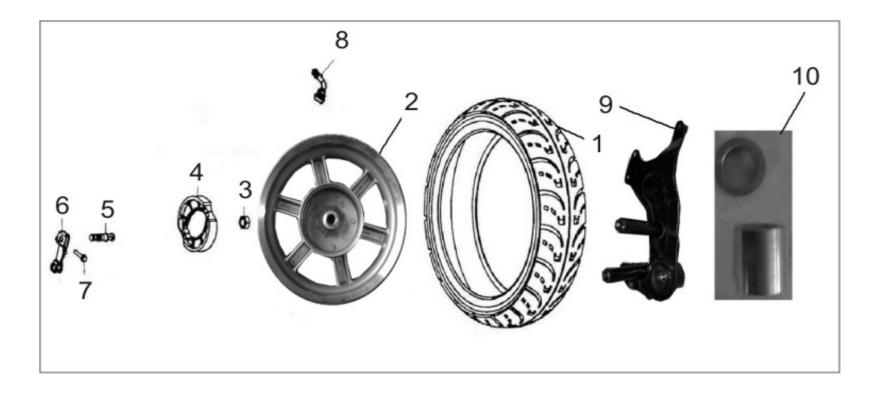


Item	P/N	Description
1	<u>RS125-B10.01</u>	Rear Tire 130/70-12
2	<u>RS125-B10.02</u>	Rear Wheel Rim
4	<u>RS125-B10.04</u>	Brake Shoe Set
5	<u>RS125-B10.05</u>	Cam, Rear Brake
6	<u>RS125-B10.06</u>	Rear Brake Cam Lever
9	<u>RS125-B10.09</u>	Mounting Bracket
10	<u>RS125-B10.10</u>	Spacer Set







(Click line item in left column for more information)

Item	P/N	Description
1	<u>RS125-B11.01</u>	Rear Brake Protector
2	RS125-B11.02	Rear Brake Return Spring
3	<u>RS125-B11.03</u>	Rear Inner Fender
4	<u>RS125-B11.04</u>	Inner Fender Bracket, Large
5	<u>RS125-B11.05</u>	Inner Fender Bracket, Small
6	<u>RS125-B11.06</u>	Rubber Seal

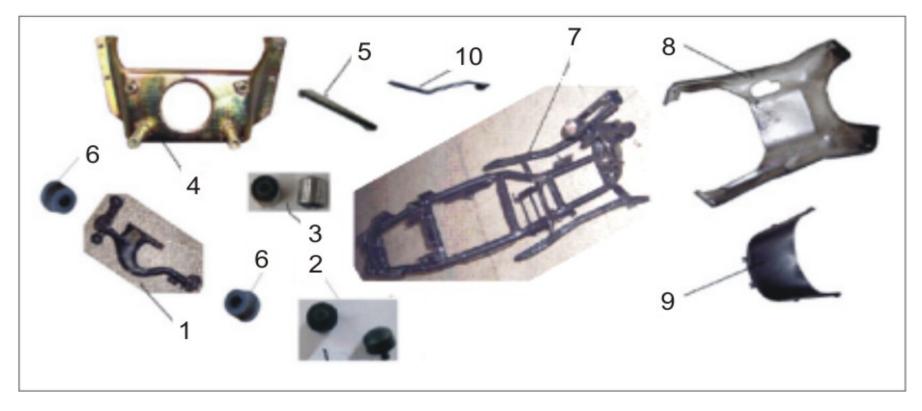


Item	P/N	Description
8	RS125-B12.08BLU	Belly Pan
8	RS125-B12.08SLV	Belly Pan
9	<u>RS125-B12.09</u>	Frame Cover, Front

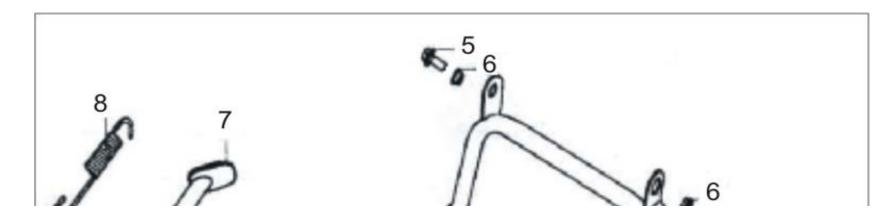

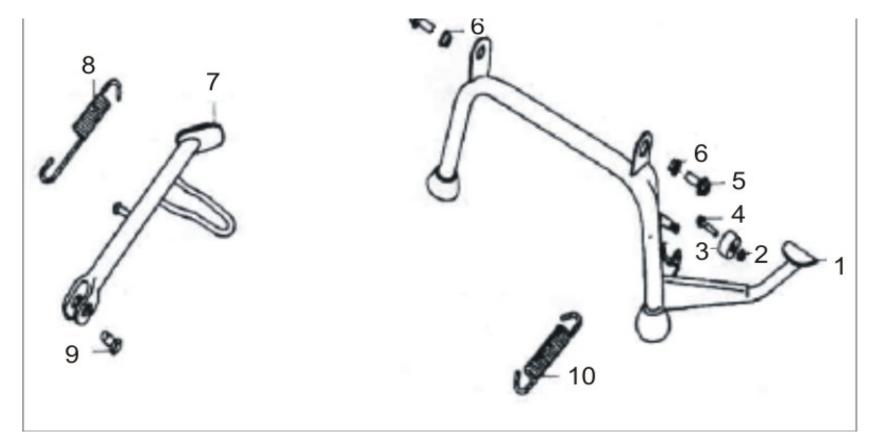

ltem 1	Р/N <u>RS125-B13.01</u>	Description Center Stand
3	<u>RS125-B13.03</u>	Cushion
7	<u>RS125-B13.07</u>	Side Stand
8	<u>RS125-B13.08</u>	Side Stand Spring
9	<u>RS125-B13.09</u>	Special Bolt, Side Stand
10	RS125-B13.10	Center Stand Spring

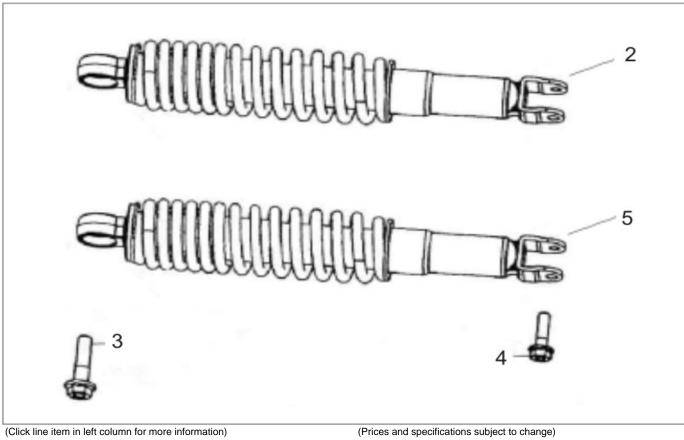



ltem

1


 P/N
 Description

 RS125-B14.01
 Rear Shock Absorber Set

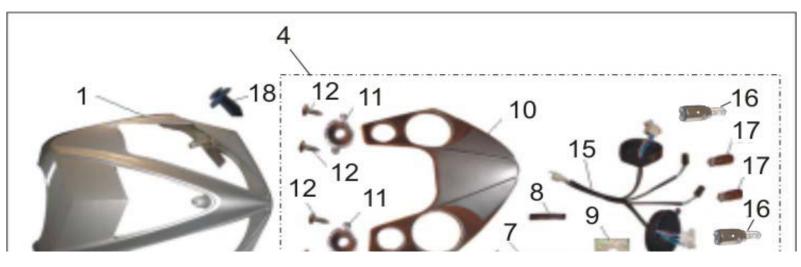

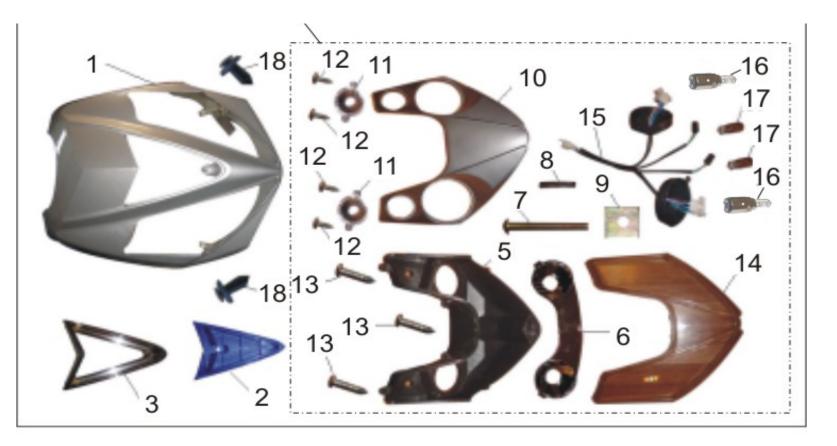


ltem	P/N	Description
1	<u>RS125-B15.01BLU</u>	Front Panel - Blue
1	RS125-B15.01SLV	Front Panel - Silver
2	RS125-B15.02BLU	Decorative Panel - Blue
2	RS125-B15.02SLV	Decorative Panel - Silver
3	<u>RS125-B15.03</u>	Decorative Trim - Blue
4	<u>RS125-B15.04</u>	Headlight Assy
16	<u>LS49-B22.34H</u>	Headlight Bulb, Halogen, 12V/35W/35W, Ba20d Base
18	<u>RS125-B15.18</u>	Rubber Bolt

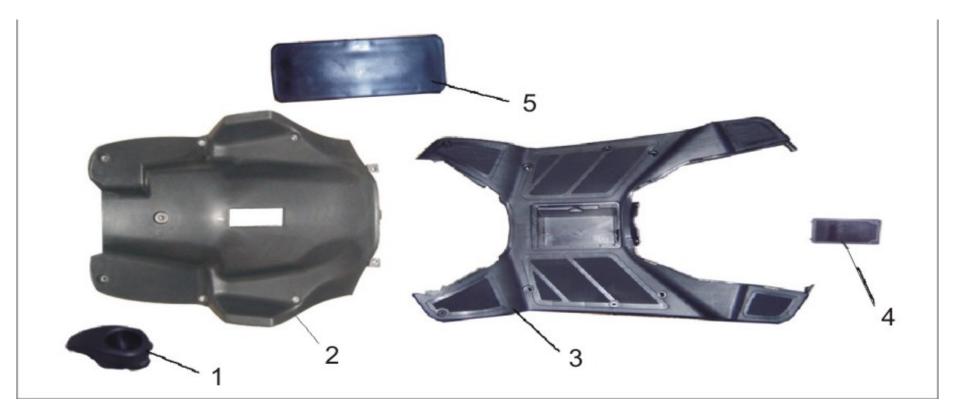


Item	P/N	Description
1	<u>RS125-B16.01</u>	Helmet Hook
2	RS125-B16.02	Front Leg Shield
3	RS125-B16.03	Floorboard
4	RS125-B16.04	Battery Cover
5	RS125-B16.05	Vin Cover



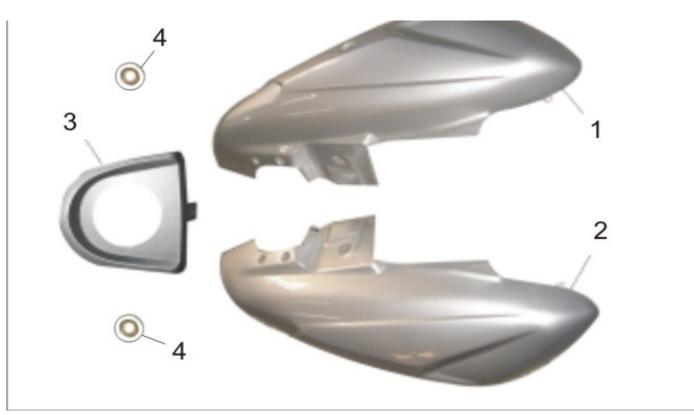

ltem 1	Р/N <u>RS125-B17.01BLU</u>	Description Left Rear Fender - Blue
1	RS125-B17.01SLV_	Left Rear Fender - Silver
2	RS125-B17.02BLU	Right Rear Fender - Blue
2	RS125-B17.02SLV	Right Rear Fender - Silver
3	RS125-B17.03BLU	Fuel Tank Cover - Blue
3	RS125-B17.03SLV	Fuel Tank Cover - Silver
4	<u>RS125-B17.04</u>	Decorative Plug



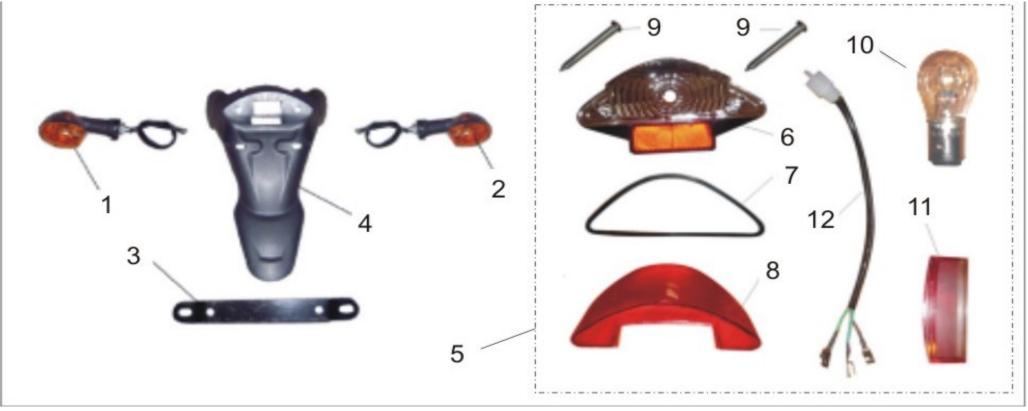



ltem	P/N	Description
3	<u>RS125-B18.03</u>	License Plate Bracket
4	D0105 D10 01	Mudflap
4	<u>RS125-B18.04</u>	Muditap
5	RS125-B18.05	Taillight Assy





Item	P/N	Description
1	<u>RS125-B19.01BLU</u>	Speedometer Cover - Blue
1	RS125-B19.01SLV	Speedometer Cover - Silver
2	<u>RS125-B19.02</u>	Instrument Panel Shield
3	<u>RS125-B19.03</u>	Instrument Panel

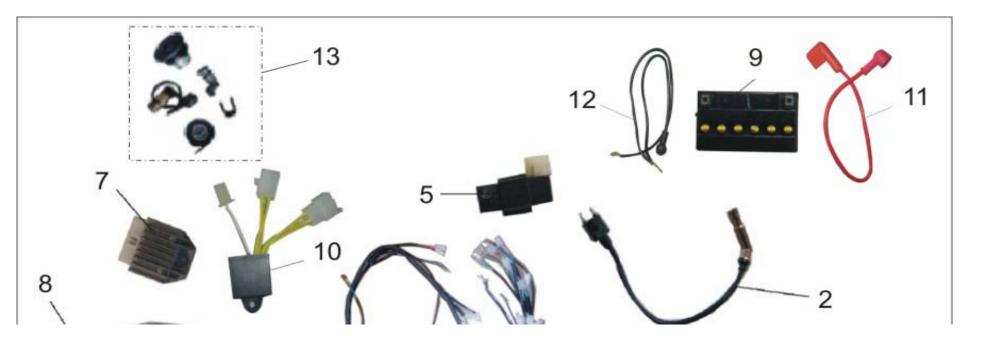

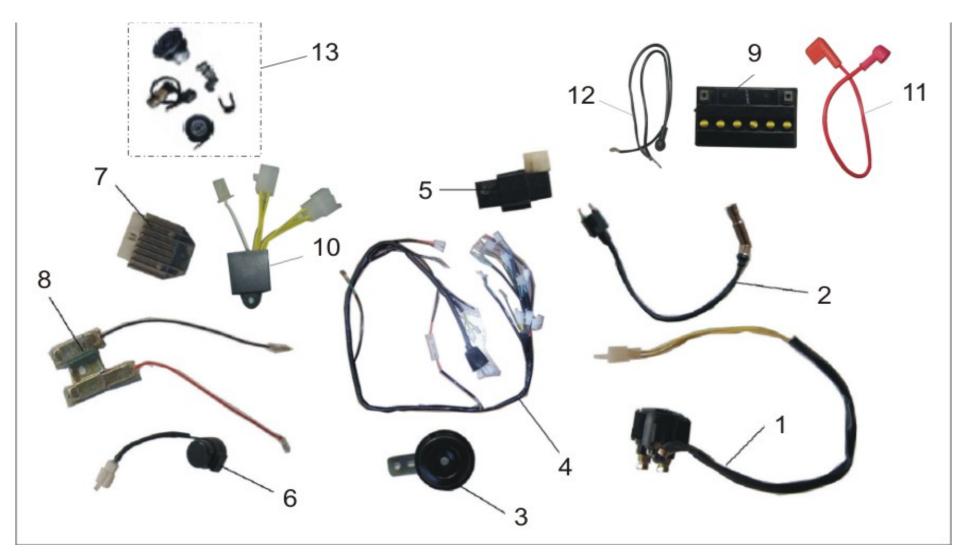

Item	P/N	Description
1	<u>RS125-B20.01</u>	Starter Relay
2	RS125-B20.02 More info	Ignition Coil
3	<u>RS125-B20.03</u>	Horn
4	<u>RS125-B20.04</u>	Main Wiring Harness
5	<u>RS125-B20.05</u>	CDI
6	<u>RS125-B20.06</u>	Flasher

(Prices and specifications subject to change)

Item	P/N	Description
9	<u>125ZT-E02.09</u>	Pipe, Secondary Air
11	<u>125ZT-E02.11</u>	Gasket, Secondary Air Pipe
12	<u>125ZT-E02.12</u>	Cylinder Head Cover
(Click line item in left column for more information)	(Prices and specific	cations subject to change)
Item	P/N	Description
1	<u>125ZT-E14.01</u>	Right Crankcase Assembly

(Click line item in left column for more information)

Item	P/N	Description
3	<u>125ZT-E15.03</u>	Piston
4	<u>125ZT-E15.04</u>	Piston Pin
5	<u>125ZT-E15.05</u>	Woodruff Key
6	<u>125ZT-E15.06</u>	Circlip
7	<u>125ZT-E15.07</u>	First Piston Ring
8	<u>125ZT-E15.08</u>	Second Piston Ring
9	<u>125ZT-E15.09</u>	Piston Oil Ring

7	<u>RS125-B20.07</u>	Regulator/Rectifier
8	<u>RS125-B20.08</u>	Resistor
10	<u>RS125-B20.10</u>	Carburetor Controller
13	<u>RS125-B20.13</u>	Ignition Switch