


B01 STEERING

1	RS125-B01.01	125T-15D-001001	Mirror Set (Left & Right)	1
2	RS125-B01.02	125T-15D-020101	Left Grip	1
3	RS125-B01.03	125T-15D-020102	Left Switch Assy	1
4	RS125-B01.04	125T-15D-020201	Rear Handlebar Cover	1
5	RS125-B01.05	125T-15D-020105	Right Switch Assy	1
6	RS125-B01.06	125T-15D-020104	Handlebar	1
7	RS125-B01.07	125T-15D-020103	Rear Brake Cable	1
8	RS125-B01.08	125T-15D-020106	Accelerator Cable	1
9			Handlebar Turn Signal, Left	1
10			Handlebar Turn Signal, Right	1
11	RS125-B01.11		Right Grip	1




B02 FRONT FORK AND FENDER

1	RS125-B02.01BLU	125T-15D-010003	Front Fender - Blue	1
1	RS125-B02.01SLV	125T-15D-010003	Front Fender - Silver	1
2	TNG-B11.02	125T-15D-010005	Front Side Reflector, Amber	2
3	RS125-B02.03	125T-15D-010008	Bracket	1
4	RS125-B02.04	125T-15D-010006	Front Fender Bracket	2
5		125T-15D-010103	Right Front Shock Absorber	1
6		125T-15D-010102	Left Front Shock Absorber	1
7		GB5787-86	Hex Bolt M10X38	2
8	RS125-B02.08	125T-15D-010101	Steering Column	1
9	RS125-B02.09	125T-15D-010009	Bracket	1
10		125T-15D-000001	Upper Bearing Set	1
11		125T-15D-000002	Lower Bearing Set	1
12		125T-15D-000003	Locknut	2
13	RS125-B02.13	125T-15D-010007	Guide Clip	1
14			Screw M6x20	2
15			Hex Nut M6	2
16	RS125-B02.16		Shock Absorber Set	
17	RS125-B02.17		Upper and Lower Bearing Set	

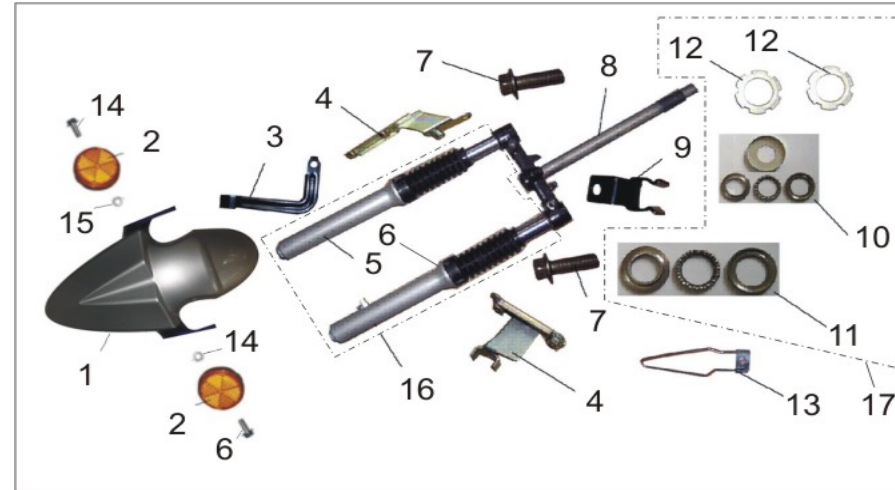


B03 FRONT WHEEL

1		125T-15D-010201	Front Wheel Assy	1
2	RS125-B03.02	125T-15D-010202	Front Tire 120/70-12	1
3	VN49-B19.29	125T-15D-010203	Valve Stem	1
4	RS125-B03.04	125T-15D-010204	Front Brake Disc	1
5	RS125-B03.05	125T-15D-010205	Brake Disc Bolt	3
6	RS125-B03.06	125T-15D-010002	Collar, Front Axle	1
7	GS150-B03.07	GB6177-86	Locknut, M12X1.25	1

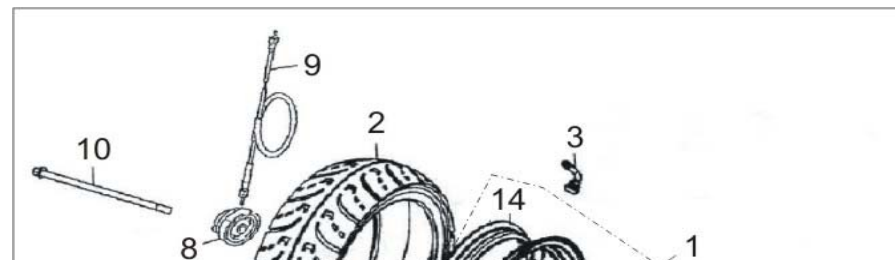


8	RS125-B03.08	125T-15D-010400	Speedometer Pickup	1
9	RS125-B03.09	125T-15D-020205	Speedometer Cable	1
10	RS125-B03.10	125T-15D-010001	Front axle	1
11	RS125-B03.11	125T-15D-010201.1	Spacer	1
12	RS125-B03.12	GB278-82	Ball Bearing	2
13	RS125-B03.13	125T-15D-010201.2	Seal	1
14	RS125-B03.14	125T-15D-010201.3	Front Wheel Rim	1

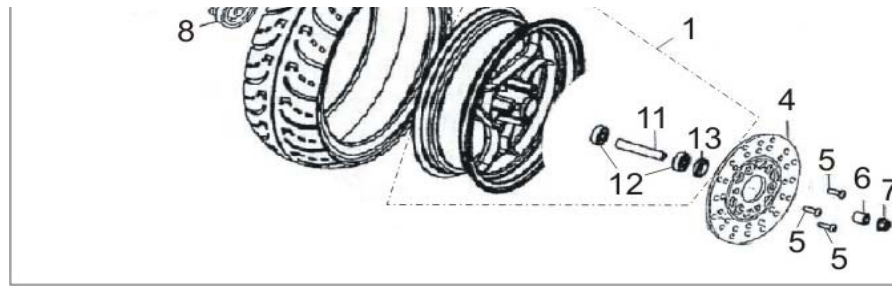


B04 FRONT BRAKE ASSY

1	RS125-B04.01	125T-15D-010301.1	Brake Handle, Right	1
2	RS125-B04.02	125T-15D-010301.2	Return Spring	1
3	RS125-B04.03	125T-15D-010301.3	Connecting Socket	1
4		125T-15D-010301.4	Nut M5	1
5		125T-15D-010301.5	Bolt, Brake Handle	1
6	RS125-B04.06	125T-15D-010301.6	Master Cylinder	1
7		125T-15D-010301.7	Bracket, Master Cylinder	1
8		125T-15D-010301.8	Bolt M6X22	2
9	RS125-B04.09	125T-15D-010301.9	Switch, Front Brake	1
10		125T-15D-010301.10	Brake Hose, Front	1
11	RS125-B04.11	125T-15D-010301.11	Bolt, Oil Inlet	2
12	RS125-B04.12	125T-15D-010301	Disc Brake, Front	1
13	RS125-B04.13	125T-15D-010302	Front Caliper Assy	1
14	RS125-B04.14	125T-15D-010302.1	Front Brake Pad Set	1

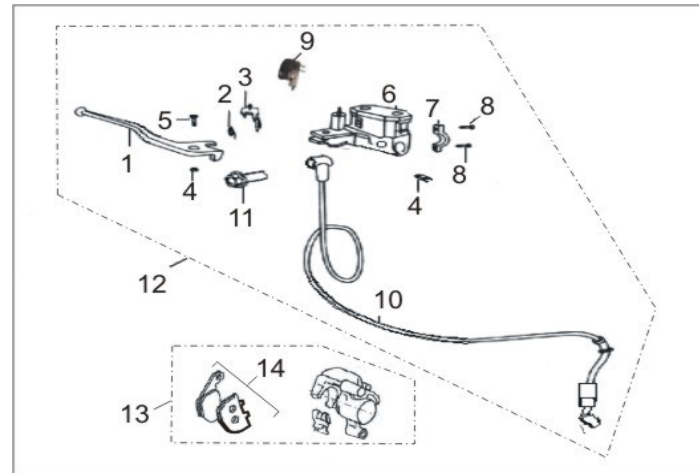


B05 MUFFLER ASSY

1		125T-15D-040801	Muffler Cannister	1
2		125T-15D-040803	Muffler Gasket	1
3		GB5787-86	Hex Bolt M8X25	5
4		125T-15D-040802	Exhaust Pipe	1
5	125T-E03.22		Exhaust Pipe Sealing Ring	1
6		GB823-86	Cap nut M6	2
7	LS49-B25.12		Clamp Cushion	2
8	LS49-B25.11		Muffler Clamp	2
9	RS125-B05.09		Muffler Assy	1

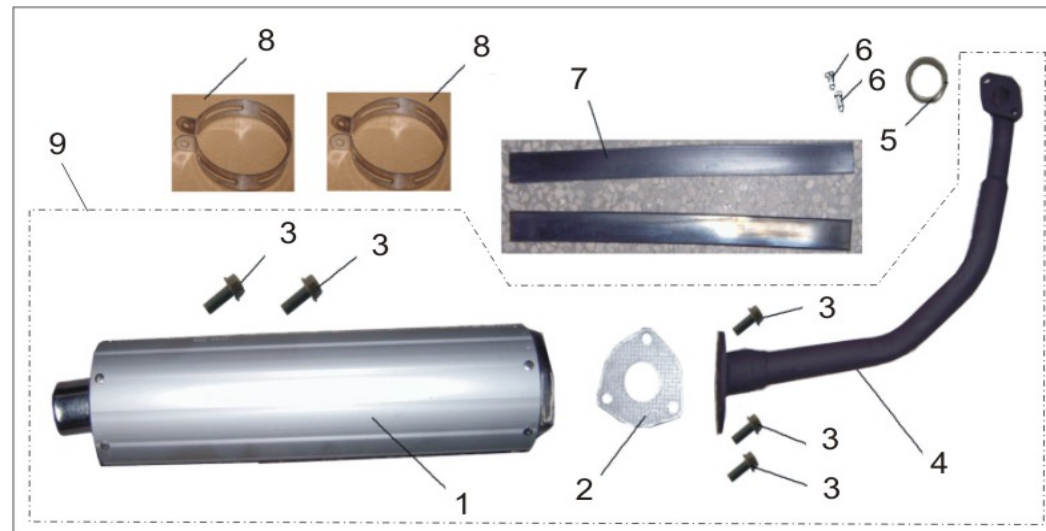


B06 AIR CLEANER

1	RS125-B06.01	125T-15D-040400	Air Cleaner Assy	1
2	RS125-B06.02	125T-15D-040016	Vent Pipe	1
3	RS125-B06.03	125T-15D-040013	Secondary Air System	1
4	RS125-B06.04	125T-15D-040009	Air Filter Frame	1
5		125T-15D-040002	Clamp	1

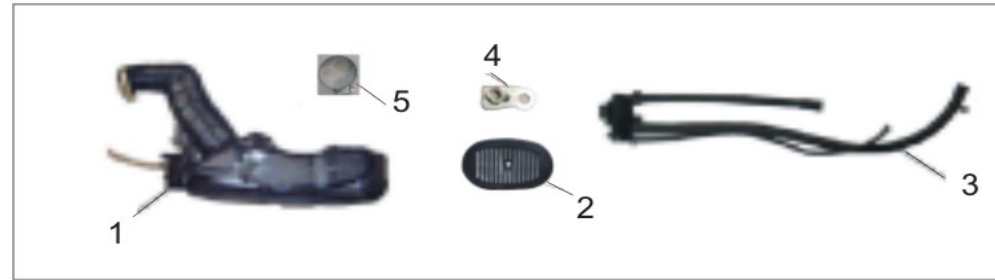

B07 FUEL TANK

1	RS125-B07.01	150T-18-060100	Fuel tank	1
2	RS125-B07.02	150T-18-060101	Fuel Sensor	1
3		150T-18-060102.1	Mounting Flange, Fuel Sensor	1
4		150T-18-060102.2	Gasket, Fuel Sensor	1
5		150T-18-060001	Fuel Line	3
6		150T-18-060003	Vacuum Tube	1
7	VN49-B07.17		Fuel Filter	1
8	VN49-B07.04		Petcock	1
9	RS125-B07.09		Tank Filter	1
10		150T-18-060002	Hose Clamp	6

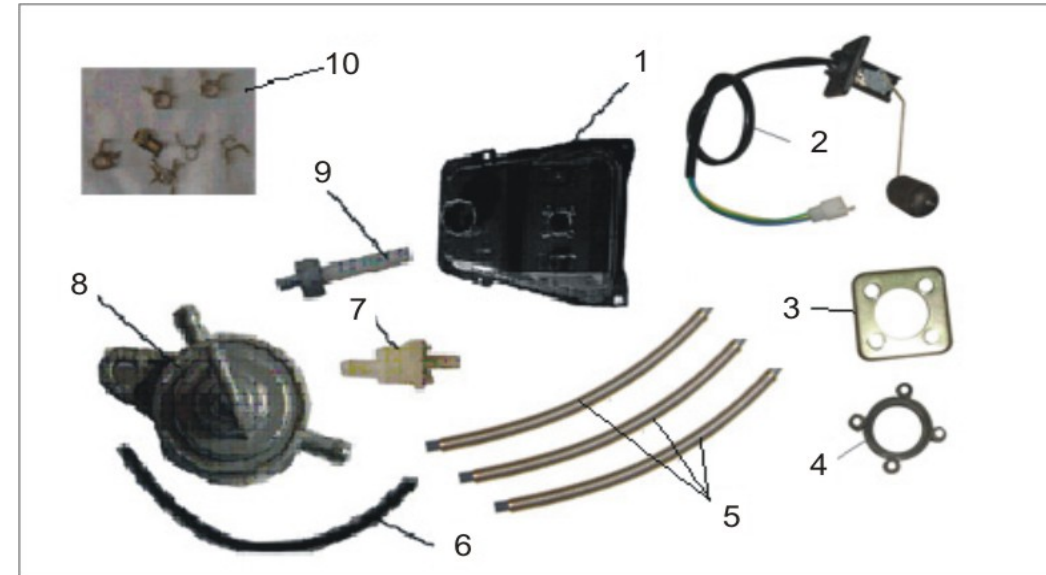

B08 SEAT ASSY

1	RS125-B08.01	125T-15D-050002	Cover, Seat Box	1
2	RS125-B08.02	125T-15D-050001	Seat Box	1
3	RS125-B08.03	125T-15D-050003	Seat Box Front Cover	1
4	RS125-B08.04	125T-15D-050004	Inspection Cover	1
5	RS125-B08.05	125T-15D-002000	Seat	1
6	RS125-B08.06	125T-15D-030701	Seat Lock Bracket	1
7	RS125-B08.07	125T-15D-030702	Seat Lock Cable	1






B09 LUGGAGE RACK

1	RS125-B09.01BLU	125T-15D-003000	Rear Rack - Blue	1
1	RS125-B09.01SLV	125T-15D-003000	Rear Rack - Silver	1



B10 REAR WHEEL

1	RS125-B10.01	125T-15D-040600	Rear Tire 130/70-12	1
2	RS125-B10.02	125T-15D-040500	Rear Wheel Rim	1
3		GB6184-86	Hex Nut M16X1.5	1
4	RS125-B10.04	125T-15D-040005	Brake Shoe Set	1
5	RS125-B10.05	125T-15D-040003	Cam, Rear Brake	1
6	RS125-B10.06	125T-15D-040004	Brake Lever	1
7		GB5787-86	Hex Bolt M8X35	1
8	VN49-B19.29		Valve Stem	1
9	RS125-B10.09	125T-15D-040700	Mounting Bracket	1
10	RS125-B10.10	125T-15D-040006	Spacer Set	1

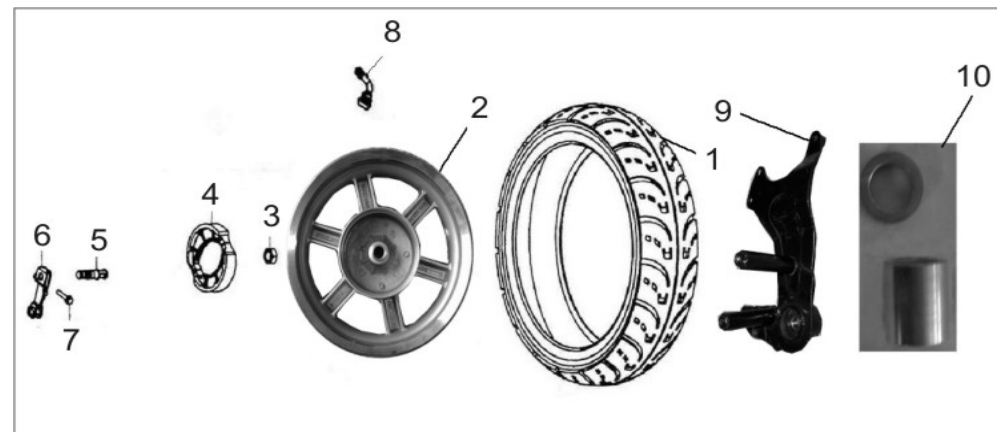


B11 REAR BRAKE AND INNER FENDER

1	RS125-B11.01	125T-15D-040010	Rear Brake Protector	1
2	RS125-B11.02	125T-15D-040017	Rear Brake Backing Spring	1
3	RS125-B11.03	125T-15D-040011	Rear Inner Fender	1
4	RS125-B11.04	125T-15D-040007	Inner Fender Bracket, Large	1
5	RS125-B11.05	125T-15D-040008	Inner Fender Bracket, Small	1
6	RS125-B11.06	125T-15D-040016	Rubber Seal	1




B12 FRAME

1		125T-15D-030600	Hanger	1
2		125T-15D-030011	Hanger Cushion	2
3		125T-15D-030006	Hanger Bushing	2
4		125T-15D-030007	Tank Bracket	1
5		125T-15D-000004	Axle	1
6		125T-15D-030010	Hanger Plug	2
7		125T-15D-030100	Main Frame	1
8	RS125-B12.08	125T-15D-030008	Frame Cover	1
9	RS125-B12.09	125T-15D-030009	Frame Cover, Front	1
11		125T-15D-030200	Bracket	1

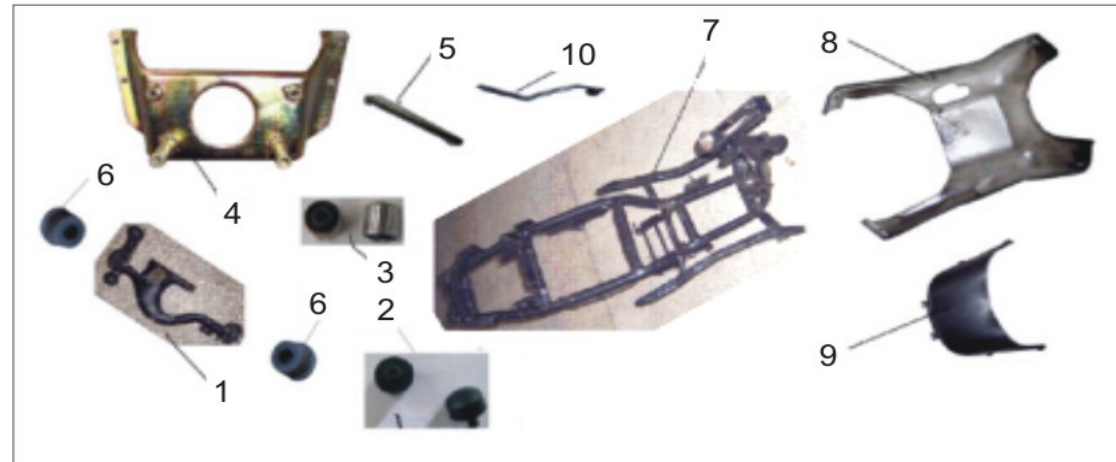

B13 SUPPORT STANDS

1	RS125-B13.01	125T-15D-030500	Center Stand	1
2		GB6187-86	Flange Nut M6	1
3	RS125-B13.03	125T-15D-030012	Cushion	1
4		GB5787-86	Flange Bolt M6X25	1
5		GB5787-86	Flange Bolt M10X25	2
6	RS125-B13.06	125T-15D-030004	Bushing	2
7	RS125-B13.07	125T-15D-030400	Side Stand	1

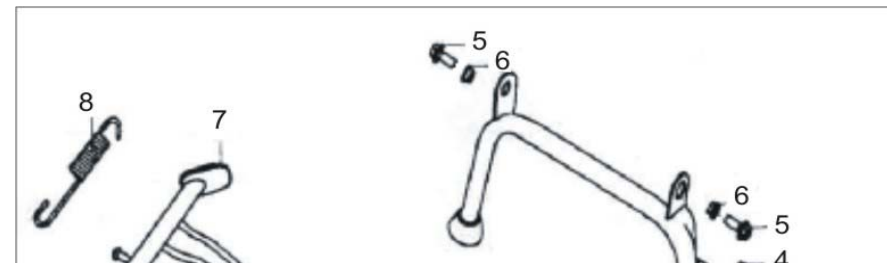


8	RS125-B13.08	125T-15D-030003	Side Stand Spring	1
9	RS125-B13.09	125T-15D-030002	Special Bolt, Side Stand	1
10	RS125-B13.10	125T-15D-030005	Center Stand Spring	1




B14 REAR SHOCK ABSORBER

1	RS125-B14.01		Rear Shock Absorber Set	1
2		125T-15D-040301	Rear Shock Absorber, LH	1
3		GB5787-86	Flange Bolt M10X40	2
4		GB5787-86	Flange Bolt M8X30	2
5		125T-15D-040302	Rear Shock Absorber, RH	1

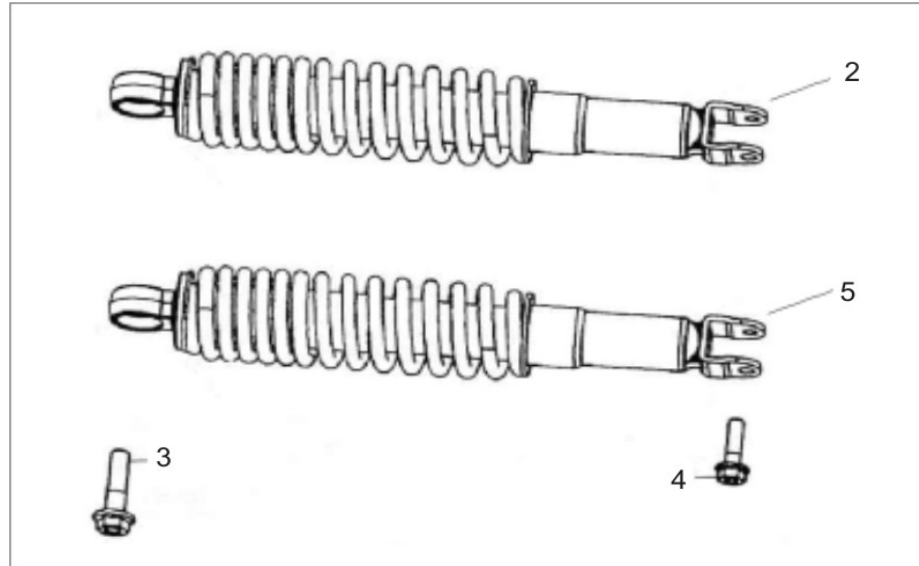

B15 FRONT COVER AND LOWER PANELS

1	RS125-B15.01BLU	125T-15D-050101	Front Panel - Blue	1
1	RS125-B15.01SLV	125T-15D-050101	Front Panel - Silver	1
2	RS125-B15.02BLU	125T-15D-050102	Decorative Panel - Blue	1
2	RS125-B15.02SLV	125T-15D-050102	Decorative Panel - Silver	1
3	RS125-B15.03	125T-15D-050103	Decorative Trim - Chrome	1
4	RS125-B15.04	125T-15D-050104	Headlight Assy	1
5		125T-15D-050104.1	Lamp Holder	1
6		125T-15D-050104.2	Reflector	1
7		125T-15D-050104.3	Adjusting Screw, Short	1
8		125T-15D-050104.4	Adjusting Screw, Long	1
9		125T-15D-050104.5	Nut, Adjusting Screw	1
10		125T-15D-050104.6	Middle Cover	1
11		125T-15D-050104.7	Reflector	2

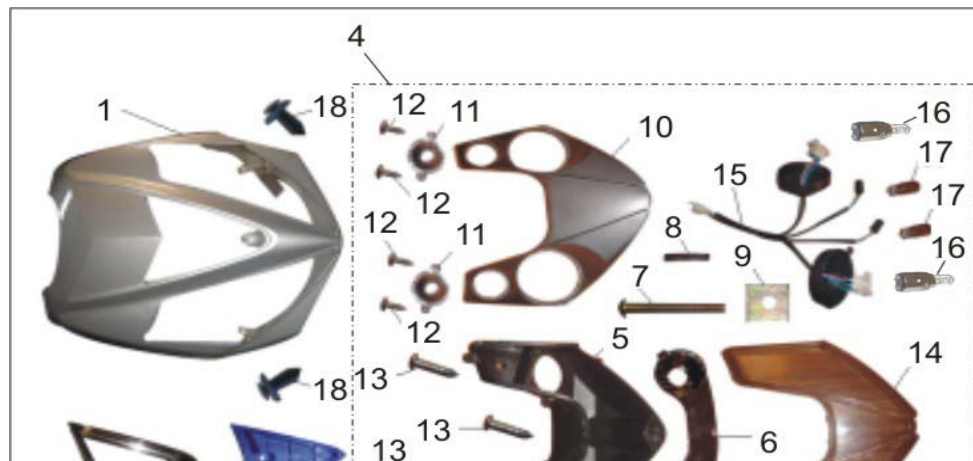


12		125T-15D-050104.8	Reflector Screw	4
13		125T-15D-050104.9	Middle Cover Screw	3
14		125T-15D-050104.10	Headlight Lens	1
15		125T-15D-050104.11	Headlight Wiring Harness	1
16	RS125-B15.16	125T-15D-050104.12	Headlight Bulb	2
17		125T-15D-050104.13	Bulb, Running Light	2
18	RS125-B15.18	125T-15D-050006	Rubber Bolt	2



B16 LEG SHIELD AND FLOORBOARD

1	RS125-B16.01	125T-15D-050403	Helmet Hook	1
2	RS125-B16.02	125T-15D-050401	Front Leg Shield	1
3	RS125-B16.03	125T-15D-050501	Floorboard	1
4	RS125-B16.04	125T-15D-050502	Battery Cover	1
5	RS125-B16.05	125T-15D-050402	Vin Cover	1

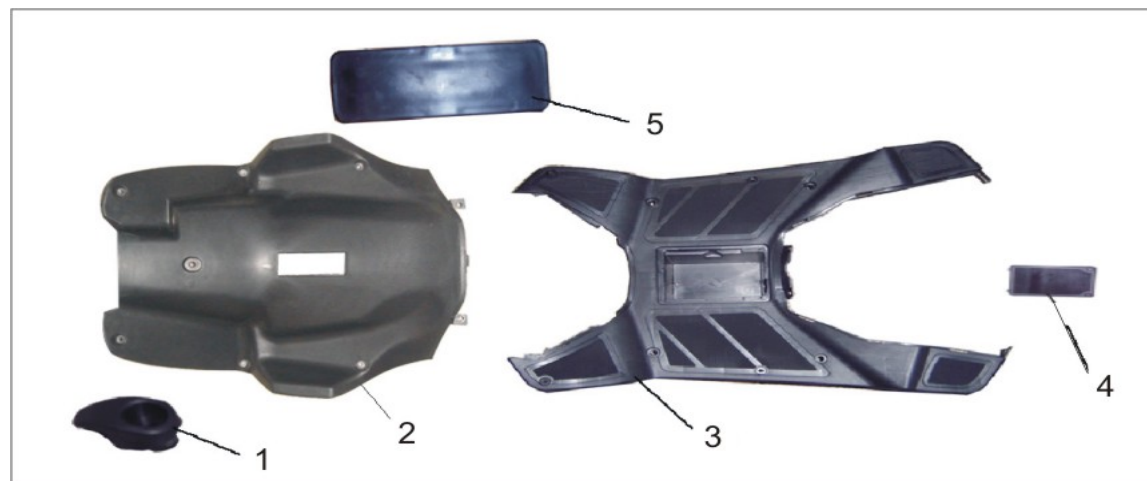


B17 REAR BODY PANELS

1	RS150-B17.01BLU	125T-15D-050301	Left Fender - Blue	1
1	RS150-B17.01SLV	125T-15D-050301	Left Fender - Silver	1
2	RS150-B17.02BLU	125T-15D-050302	Right Fender - Blue	1
2	RS150-B17.02SLV	125T-15D-050302	Right Fender - Silver	1
3	RS150-B17.03BLU	125T-15D-050005	Cover - Blue	1
3	RS150-B17.03SLV	125T-15D-050005	Cover - Silver	1
4	RS150-B17.04	125T-15D-050007	Decorative Plug	2




B18 REAR FENDER AND TAILLIGHT

1			Left Rear Turn Signal	1
2			Right Rear Turn Signal	1
3	RS125-B18.03	125T-15D-050702	License Plate Bracket	1
4	RS125-B18.04	125T-15D-050701	Mudflap	1
5	RS125-B18.05	125T-15D-050800	Taillight Assy	1
6		125T-15D-050801	Taillight Reflector	1
7		125T-15D-050802	Taillight Seal Ring	1
8		125T-15D-050803	Taillight Lens	1
9		125T-15D-050804	Taillight Lens Screw	2
10			Taillight Bulb	1
11		125T-15D-050806	License Plate Light Lens	1
12		125T-15D-050807	Taillight Wiring harness	1

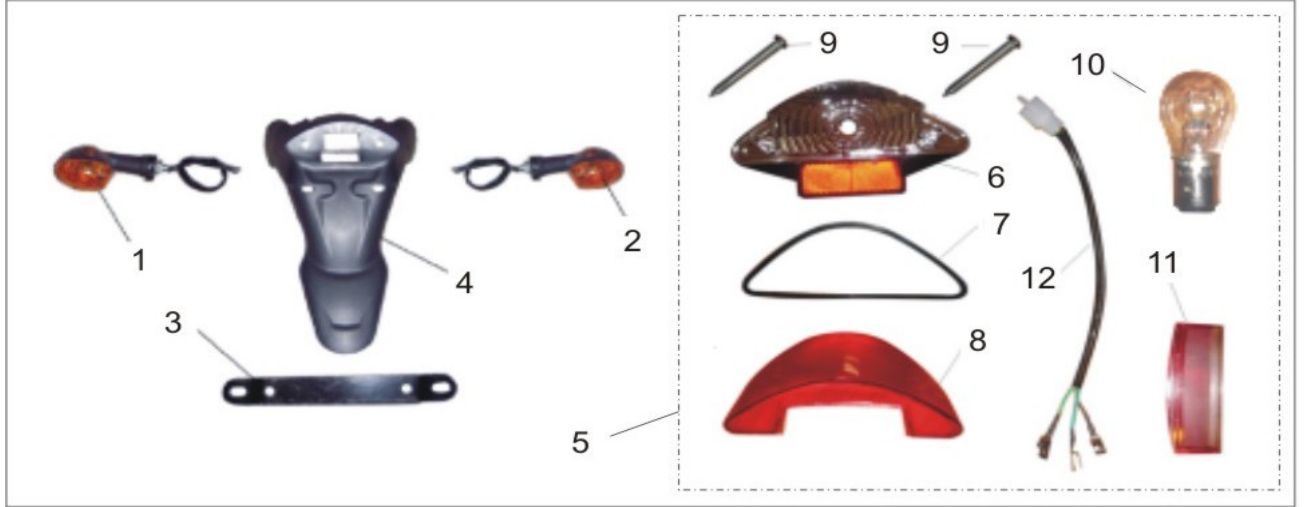

B19 INSTRUMENT PANEL

1	RS125-B19.01BLU	125T-15D-020202	Speedometer Cover - Blue	1
1	RS125-B19.01SLV	125T-15D-020202	Speedometer Cover - Silver	1
2	RS125-B19.02	125T-15D-020203	Instrument Panel Shield	1
3	RS125-B19.03	125T-15D-020204	Instrument Panel	1

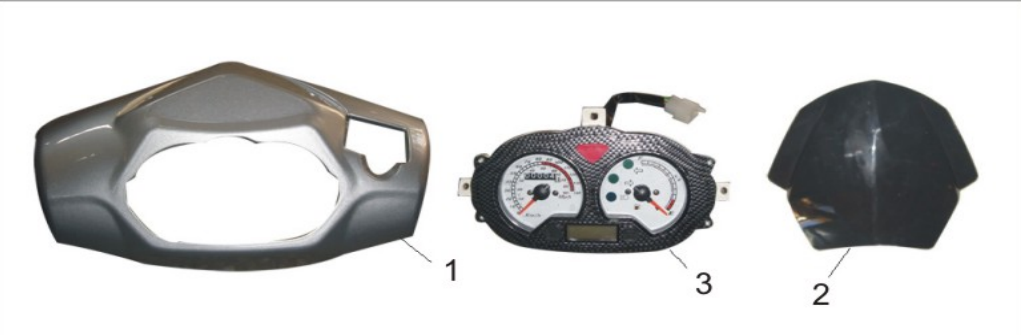

B20 ELECTRICAL

1	RS125-B20.01	125T-15D-070100	Starter Relay	1
2	RS125-B20.02	125T-15D-070200	High Tension Ignition Coil	1
3	RS125-B20.03	125T-15D-070300	Horn	1
4	RS125-B20.04	125T-15D-070001	Main Wiring Harness	1



5	RS125-B20.05	125T-15D-070002	CDI	1
6	RS125-B20.06	125T-15D-070003	Flasher	1
7	RS125-B20.07	125T-15D-070004	Regulator/Rectifier	1
8	RS125-B20.08	125T-15D-070007	Resistor	1
9	TNG-BAT-X7		Battery	1
10	RS125-B20.10	125T-15D-070008	Carburetor Controller	1
11	RS125-B20.11	125T-15D-070006	Battery Cable, Positive	1
12	RS125-B20.12	125T-15D-070005	Battery Cable, Negative	1
13	RS125-B20.13	125T-15D-030001	Ignition Switch	1

